**IRONMAN DUALLIE** 

#### **ENGLISH**

Owner's Instruction Manual

Z.()·B.

## READ AND UNDERSTAND THESE INSTRUCTIONS COMPLETELY!

IMPORTANT - KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Before attempting to assemble or use your new stroller, read and understand these assembly and use instructions completely, as well as the warnings at the beginning and throughout this document, to ensure proper assembly and operation.

If you are unclear on any point, contact your dealer or BRITAX before use. For a list of dealers, visit www.bobgear.eu

## A

## WARNINGS



- If your stroller is to be used by other people who are not familiar with it (such as grandparents), always show them how the stroller is used.
- Accessories which are not approved by BOB shall not be used.
- This product is not suitable...
- as a substitute for a bed or cot.
   Strollers and pushchairs may only be used for transport.
- for more than two children.
- for commercial use.
- as a travel system in combination with other infant carriers.
- Ensure that all the locking devices are engaged before use.
- When carrying the stroller, make sure you do not open the safety locks by mistake.
- Never allow occupants to stand in stroller. Stroller can tip over.
- Always use wrist strap to prevent being separated from stroller.
- Any load attached to the handle affects the stability of the pushchair.
- Do not attach parcels or bags to the handlebar or frame of stroller except those recommended by BOB.
- Do not place sharp objects in the seat back pocket. Leaning against sharp objects in seat back pocket can result in injury to occupants.
- When starting out and during use, always make sure the children's hands and feet are away from wheels
- Do not use stroller on stairs or steep inclines. Stroller can tip over.
- Never use with low tire pressure or deflated tires as this could result in loss of control.
- Never pull stroller backward up stairs. Doing so could damage the suspension system, leading to frame failure.
- Use extreme caution when using stroller on uneven and/or unpaved, wet or slick surfaces, as these conditions create additional hazards and can lead to a loss of stability.
- Do not modify the stroller or any

- labels. Doing so voids the warranty and could lead to a dangerous condition.
- Protect stroller when transporting or shipping to prevent damage to stroller and stroller components.
   Check closely for damage after transporting or shipping. Discontinue using stroller if damaged or if any parts are missing.
- parts are missing.Never fold the stroller when a child is sitting in it.
- To avoid injury ensure that your children are kept away when folding and unfolding this product
- Always use the restraint system.
- Never leave your children unattended.
- Always engage the brake when you park the stroller, before you put your child into it and before you remove your children.
- When making adjustments, make sure your children cannot reach into moving parts.
- Protect your children from strong sunlight. The hood does not provide complete protection from dangerous UV rays.
- The stroller is not equipped for use in low light or after dark.
- Failure to properly assemble or install the quick release wheels on this stroller may result in the wheels becoming detached while moving and a subsequent loss of control.
- The parking brake is not designed as a stopping brake. The brake should not be used to slow or stop the stroller because doing so could cause the stroller to stop abruptly, resulting in loss of control.
- Do not park on inclines. The parking brake is intended to park the stroller on flat surfaces only. Parking on inclines may result in tip over or runaway stroller.
- Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- Always re-adjust the harness when

## **WARNINGS**

- changing the seating position of your children.
- When seat is fully reclined, backward tip over is more likely.
- Do not exceed the maximum weight limit of 1 kg for each of the backrest
- pockets.

   Do not exceed the maximum weight limit of 4 kg for the shopping basket.


  • Do not let your children play with
- this product.
- This seat unit is not suitable for children under 6 months.

## TABLE OF CONTENTS

WARNINGS Page 26 TABLE OF CONTENTS Page 28 Page 29 STROLLER ANATOMY AGE RECOMMENDATIONS Page 30 Page 30 STROLLER ASSEMBLY **Unpack Stroller** Page 30 Wheels Page 30 Adjust Quick Release Page 31 Rear Wheel Installation Page 31 Removing Rear Wheel Page 33 Front Wheel Secondary Retention Devices Page 33 Front Wheel Installation Page 34 Removing Front Wheel Page 35 Hand Brake Page 36 Unfold Stroller Page 37 Fold Stroller Page 37 USING Stroller for jogging off-road mode Page 39 STROLLER ADJUSTMENTS Page 40 Check Tire Pressure Page 40 Adjust Tracking Page 40 Fine Tune Tracking Page 41 Select Shock Setting Page 42 Setting Parking Brake Page 42 Secure Child In Seat Page 43 Attach Wrist Strap Page 44 Recline Seat Page 44 Position Canopy Page 45 Accessory Adapter Page 45 **WEATHER SHIELD** Page 45 CARE AND MAINTENANCE Page 46 STORAGE Page 47 Page 47 **CARGO** Page 47 STROLLER ACCESSORIES LIMITED WARRANTY Page 47

## STROLLER ANATOMY


SPORT UTILITY STROLLER DUALLIE, IRONMAN DUALLIE

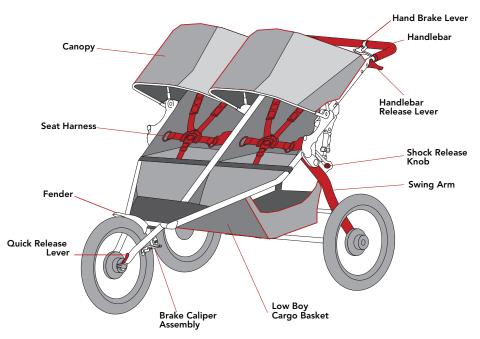

#### **CONGRATULATIONS**

Congratulations on your purchase of the BOB Sport Utility Stroller Duallie® or IRONMAN Duallie® Stroller.

For updates to this manual, warranty and other recent product notifications, please visit www. bobgear.eu periodically or any time before making approved changes or adding approved equipment to your stroller.

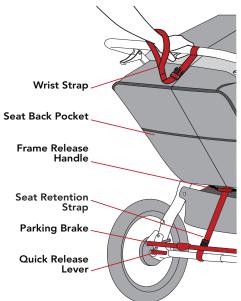

#### **AGE RECOMMENDATIONS**

Your child should be at least 6 months old before riding in a BOB Duallie® stroller. For jogging/off-road stroller use, children should be at least 9 months old. This pushchair is designed for children up to 3 years or maximum 17 kg weight.

Children develop at different rates. Prior to first use, consult with your pediatrician regarding suitability of stroller use with your child.

Please refer to the below table for age/use guidelines:

RECOMMENDED USE	AGE
Walk Only	6 Months - 3 Years or 17 kg weight per occupant
Jogging/Off-Road	9 Months - 3 Years or 17 kg weight per occupant

When using the stroller in jogging/ off-road mode, make sure to follow the section USING STROLLER for jogging/off-road.

#### STROLLER ASSEMBLY

#### UNPACK STROLLER

Remove stroller and wheels from box. Front wheel is stowed in folded stroller.

## WARNING


Remove all packaging materials and discard to avoid choking and suffocation hazards.

#### FENDER INSTALLATION

Before installing the front wheel, you will need to attach the fender.

#### 1. Remove Mounting Screws

Two fender mounting screws can be found already installed in the stroller frame. Remove the two fender mounting screws.

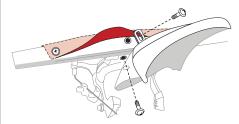

NOTE: You might want to remove a fabric screw (right or left) to give better access to the cross tube mounting hole.

## 2. Align Fender And Cross Tube Hole

Align the hole in the metal tab of the fender with the threaded hole in the center of the front cross tube and install screw.

#### 3. Align Fender And Brake

Mounting Hole

Align the hole in the plastic fender with the hole in the brake mounting plate and install screw.

#### 4. Tighten Screws

Center fender on stroller and tighten screws. Reinstall and tighten any additional fabric screws that had been removed.

#### WHEELS

Before attempting to install wheels, read and understand warnings and instructions completely.

## WARNING

Using your stroller with an improperly adjusted wheel quick release can allow the wheel to vibrate, wobble or become detached from the stroller.

Accordingly, it is critical that you:

- Ask your dealer to instruct you on the proper technique for safely installing and removing your wheels.
- Understand and use the proper method for securely clamping a wheel to the stroller using a quick release.
- Check to make sure the wheels are securely clamped before each use of the stroller.

The wheel quick release is a cam device that supplies the clamping force required to hold the stroller wheel securely in place. To safely secure a wheel to the stroller, it is critical that you understand how the quick release works, how to use and adjust it properly and the amount of force necessary to safely secure the wheel.

## **A WARNING**

The quick release is a cam device and must be used correctly to supply the necessary clamping force to safely hold the wheel in place. It is not a wing nut system and turning the lever while holding the tension adjusting nut does not supply the required force to safely clamp the wheel in the dropouts.

#### **ADJUST QUICK RELEASE**

The rear wheels are correctly clamped in place by the force generated when the quick release lever is closed and the cam action pulls the axle against the dropout, securing it in place.

The front wheel is correctly clamped in place by the force generated when the quick release lever is closed and the cam action pulls the lever housing against one dropout, and pulls the adjusting nut against the other dropout, clamping the hub between the dropouts.

The tension adjusting nut sets the amount of clamping force. Turning the tension adjusting nut in the clockwise direction while preventing the guick release lever from rotating, increases the amount of clamping force. Alternatively, turning the tension adjusting nut counterclockwise, while preventing the quick release lever from rotating, reduces the amount of clamping force. The tension adjusting nut only needs minor adjustments to provide the correct clamping force, less than a half turn can mean the difference between safe and unsafe clamping force.

#### **REAR WHEEL INSTALLATION**


#### 1. Unlock Parking Brake

Prior to installing the rear wheels, position the parking brake in the unlocked position.






## **2. Rotate Quick Release Lever** Rotate the quick release lever so it curves away from the dropout.

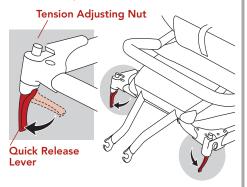


3. Insert Rear Wheel Stub Axle

Insert the rear wheel's stub axle into the hole in the rear dropout. If the axle does not slide in easily, loosen the quick release tension adjusting nut by hand. Re-insert the axle fully into the rear dropout until the axle shoulder or snap ring on the axle comes in contact with the dropout.

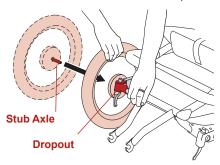

4. Adjust Quick Release Cam Lever To adjust the quick release, hold the quick release cam lever in the FULLY OPEN position with your right hand, and tighten the tension adjusting nut with your left hand until it is finger tight against the dropout.

To TIGHTEN tension adjusting nut, turn clockwise.

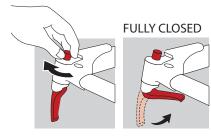

To properly close the quick release and secure the rear wheel in the dropouts, confirm the axle is fully inserted in the dropout, while maintaining the wheel in this position, rotate the quick release toward stroller and into the FULLY CLOSED position.

When properly closed, the curve of the quick release will be pointing toward the dropout and angled slightly toward the center of the stroller. To generate enough clamping force it is necessary to wrap your fingers around the dropout while closing the quick release lever. The proper force required to close the quick release lever should leave a visible imprint in the palm of your hand.

## **A WARNING**

It takes considerable force to securely clamp the wheel. If you are able to completely close the quick release without wrapping your fingers around the dropout and the quick release lever does not leave a visible imprint in the palm of your hand, the tension is not adequate. Rotate the lever to the FULLY OPEN position and turn the tension adjusting nut a quarter turn clockwise and repeat the closing process.

If the quick release lever cannot be rotated to the FULLY CLOSED position, rotate the lever to the FULLY OPEN position and turn the tension adjusting nut a quarter turn counterclockwise. Repeat the closing process.

To LOOSEN tension adjusting nut, turn counterclockwise.





#### REMOVING REAR WHEEL

#### 1. Unlock Parking Brake

Prior to removing the rear wheels, position the parking brake in the unlocked position.

#### 2. Open Quick Release Lever

Move the wheel's quick release lever from the locked or FULLY CLOSED position to the FULLY OPEN position.

**FULLY CLOSED** 








#### 3. Remove Wheel

Raise the wheel a few centimeters off the ground and pull the wheel out of the dropout.

#### FRONT WHEEL SECONDARY

#### RETENTION DEVICES

Your stroller fork utilizes secondary wheel retention devices designed to help keep the wheel from disengaging from the fork if the quick release is incorrectly adjusted and tightened. The wheel can still remain loose and wobbly even with the secondary retention device working if the quick release has not been properly tightened and adjusted. The secondary retention devices on your stroller are the integral type that are formed into the outer faces of the fork dropouts.

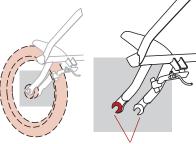

**Dropouts** (Secondary Retention Devices)

## **A WARNING**

It is critical that you do not remove or disable the secondary retention devices. The secondary retention devices serve as a backup for a critical adjustment. The secondary retention devices can reduce the risk of the wheel disengaging from the fork if the quick release is not adjusted and tightened correctly. Removing or disabling the secondary retention devices will void the warranty.

Secondary retention devices are not a substitute for correct quick release adjustment and tightening. Using your stroller with an improperly adjusted and tightened wheel quick release can allow the wheel to vibrate, wobble or become detached from the stroller.


Make a periodical routine check of adequate wheel fixing and clamping. If the wheel is not fully engaged and slightly moves to the outside the wheel has to be fixated instantly.

#### FRONT WHEEL INSTALLATION

#### 1. Install Front Wheel Quick Release Lever

Remove Tension Adjusting Nut from quick release rod and take off first spring. Slide quick release rod through front wheel axle, place spring back on quick release rod, small side toward axle, and thread tension adjusting nut back on.

**Tension Adjusting Nut** 

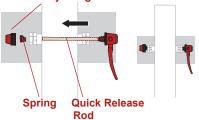

**NOTE:** Prior to installing the front wheel it is necessary to open the brake quick release to provide clearance for the wheel/tire to pass the brake pads.

#### 2. Open Brake Quick Release

Open the brake quick release by rotating the brake quick release lever in the clockwise direction.

#### **Brake Quick Release**




## 3. Rotate Front Wheel Quick Release Lever

Rotate quick release lever so that it curves away from the wheel. This places it in the FULLY OPEN position.



#### 4. Insert Front Wheel

When facing the front of the stroller, insert the wheel between the fork dropouts so that the axle firmly contacts the top of the slots of the fork dropouts.

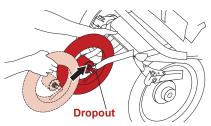

#### 5. Adjust Quick Release Lever

To adjust the quick release, hold the quick release cam lever in the FULLY OPEN position with your right hand as shown. Tighten the tension adjusting nut with your left hand until it is finger tight against the fork dropout.






#### 6. Close Quick Release Lever

To properly close the quick release and secure the front wheel in the dropouts, confirm the axle is

34

contacting the top of the dropouts on both sides and the wheel is centered left to right.

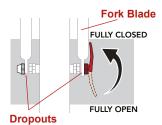

While maintaining the wheel in this position, rotate the quick release upward and into the FULLY CLOSED position. When properly closed, the curve of the quick release will be pointing toward the wheel and parallel to the fork blade. To generate enough clamping force it is necessary to wrap your fingers around the fork blade while closing the quick release lever. The proper force required to close the quick release lever should leave a visible imprint in the palm of your hand.

A WARNING It takes considerable force to securely clamp the wheel. If you are able to completely close the quick release without wrapping your fingers around the fork blade and the quick release lever does not leave a visible imprint in the palm of your hand, the tension is not adequate. Rotate the lever to the FULLY OPEN position and turn the tension adjusting nut a quarter turn clockwise and repeat the closing process.

If the quick release lever cannot be rotated to the FULLY CLOSED position, rotate the lever to the FULLY OPEN position and turn the tension adjusting nut a quarter turn counterclockwise. Repeat the closing process.

#### 7. Close Brake Quick Release

After installing the front wheel, the brake quick release will need to be placed in the closed position. Close the brake quick release lever by squeezing the brake pads against the wheel with one hand, then rotate the brake quick release lever in the counter clockwise direction with your other hand until it points downward.




#### REMOVING FRONT WHEEL

## **1. Open Brake Quick Release**See Front Wheel Installation section.

# 2. Open Quick Release Lever Move the wheel's quick release lever from the locked or FULLY CLOSED position to the FULLY OPEN position. Your front fork has integral secondary retention devices that require loosening the tension adjusting nut enough to allow removal of the wheel.

#### 3. Remove Front Wheel

Raise the front wheel a few centimeters off the ground and tap the top of the wheel with the palm of your hand to knock the wheel out of the front fork.

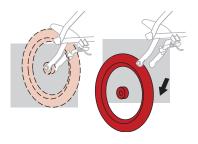

#### HAND BRAKE


The hand brake may be used to help slow or stop a stroller. The hand brake is not a parking brake.

**NOTE:** For the hand brake to work correctly, it is critical that it be adjusted properly. Squeeze the brake lever and verify that the brake pads contact the rim. Verify brake quick release is in closed position. See Front Wheel Installation section.

The hand brake system is equipped with two barrel adjusters. If you are not familiar with how to use the barrel adjusters, please contact BOB customer service or visit your local dealer for assistance.

#### 1. Align Brake Pads

If brakes are misaligned, use a 10mm wrench to loosen brake pad nuts, slide pads into correct position and tighten securely.

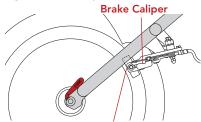


**Brake Pad Aligned With Rim** 

#### 2. Adjust Cable Tension

The cable tension is pre-adjusted at the factory, but the brake cable will need periodic adjustment (as the cable stretches slightly and the black cable housing compresses over time).

To adjust cable tension, there are two barrel adjusters in the brake system; one at the hand brake lever, and one at the caliper brake. To adjust the brake cable tension, one or both barrel adjusters may need to be adjusted.
 
#### HAND BRAKE



#### **CALIPER BRAKE**




To tighten the cable, loosen the lock ring and turn the barrel adjuster in the counter clockwise direction. Secure the barrel adjuster in the new position by tightening the lock ring against the caliper or brake lever body.

To loosen the cable, turn the barrel adjuster in a clockwise direction and secure by tightening the lock ring. There should be a 1 mm clearance between the rim and brake pads.

#### 3. Reposition Brake Caliper

If gap is not equal on each brake pad, the brake caliper can easily be repositioned on the frame by loosening the caliper mounting nut with a 10mm wrench, adjust caliper position and re-tighten the same nut.

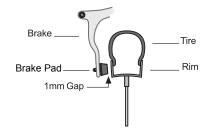

A WARNING If you do not understand these instructions, or feel the brake is adjusted incorrectly, take the stroller to your dealer for proper adjustment. If your brake pads are worn, see your dealer for replacements.

#### **UNFOLD STROLLER**

## **A WARNING**

Care must be taken when folding and unfolding the stroller to prevent finger entrapment or injury.


## **A WARNING**

To avoid injuries, never fold or unfold stroller with other individuals within reach of stroller.


### **A WARNING**

Ensure that all the locking devices are engaged before use.

**1. Lift Red Frame Release Handle** Keep tires on ground as stroller swing arm begins to swing open.

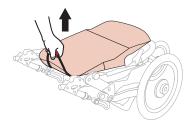


**NOTE:** Stroller swing arm will swing open and "snap" into an open and locked position.

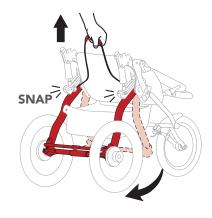

#### 2. Rotate Handlebar


Lift handlebar up and back until it "snaps" into locked and upright position.

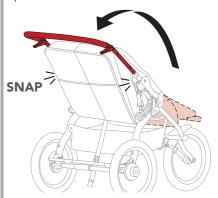


#### 3. Attach Seat Retention Strap

Loop seat retention strap around cross tube and secure with buckle.

 ▲ WARNING Do not loop seat retention strap around or over brake bar.



 A WARNING Seat retention strap must be correctly attached before loading stroller.



**Correctly Attached Seat Retention Strap** 

#### **FOLD STROLLER**

#### 1. Lock Parking Brake

Set parking brake in locked position.


#### 2. Remove Child From Seat

#### 3. Empty Stroller


Remove contents from low boy cargo basket and pockets.

#### 4. Rotate Handlebar


Squeeze both handlebar release levers simultaneously. Rotate handlebar forward onto seat.

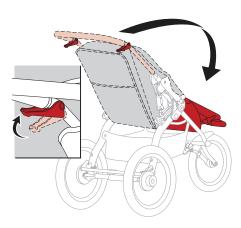

# **5. Lift Red Frame Release Handle**Using a short, quick tug, lift red frame release handle up. Keep tires on ground as stroller collapses toward front wheel

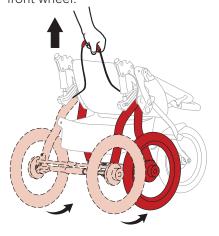


#### 6. Lay Stroller Flat

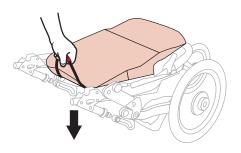

#### 7. Secure Folded Stroller

Use wrist strap buckle to secure stroller in folded position.

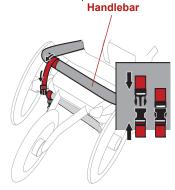

#### 8. Make It Smaller

Take off the front and rear wheels to make it even smaller. See Removing Rear Wheel and Removing Front Wheel sections.

#### **USING STROLLER FOR JOGGING**

#### **OFF-ROAD MODE**

Please make sure to follow the instructions below when using your BOB stroller for running/jogging or in off-road mode:

## **A WARNING**

Never use any attachments when using the stroller for jogging or off-road.

## **A WARNING**

Using the stroller in jogging/offroad mode for children under 9 months of age which cannot sit upright on their own can be a serious health hazard and may impact their physical development.

## **A WARNING**

Always go jogging/off-road with the stroller seat in the fully upright position. Going jogging/off-road with the seat in reclined positions may result in a loss of stability and injury.

#### **STROLLER ADJUSTMENTS**

#### **CHECK TIRE PRESSURE**

Plastic wheels are rated to a maximum tire inflation pressure of 2 bar. The maximum inflation pressure is embossed on the wheel next to the valve stem.

## **A WARNING**

Inflating tires above 2 bar can damage the wheel and/ or tire resulting in loss of control and injury.

Aluminum wheels can have the tires inflated to the pressure embossed on the tire. However, we recommend 2 bar for a comfortable ride.

## **A WARNING**

Inflating tires above the maximum inflation pressure embossed on the tire can damage rim and or tire resulting in loss of control and injury.

#### ADJUST TRACKING

If stroller pulls left or right when the stroller is on flat terrain, adjust the tracking as outlined in the following steps.

▲ WARNING Do not roll test with a child or any occupant in the stroller.

#### 1. Empty Stroller

Remove contents from low boy cargo basket and pockets.

#### 2. Check Tire Pressure

# **3. Place Stroller On Level Ground** Find a stretch of level ground about 5 metres long.



#### 4. Align Rear Wheel Axles

Align stroller so rear wheel axles are perpendicular to a straight line.



#### 5. Test Alignment


Push stroller straight forward and release to see if stroller veers right or left. Repeat push test several times.



**NOTE:** If stroller consistently pulls to left or right, the tracking can often be corrected by simply rotating the front wheel axle and/or reorienting the front wheel by removing the front wheel, flipping it around and reinstalling it.

#### 6. Rotate The Front Wheel Axle

Open the front wheel quick release and rotate axle 90 degrees in dropout. Retighten quick release. See Removing Front Wheel and Front Wheel Installation sections.

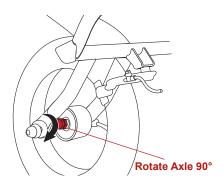

#### 7. Perform Roll Testing

If the stroller still consistently pulls to the left or right when pushed straight, proceed to next step.

#### 8. Reorient The Front Wheel

Open the front wheel and front brake quick releases. Remove the front wheel and flip it around so the quick release lever is on the opposite side. Reinstall the front wheel, secure the wheel and brake quick release levers. See Removing Front Wheel and Front Wheel Installation sections.




Wheel Reoriented With Quick Release Lever On Opposite Side

#### 9. Perform Roll Test

If the stroller still consistently pulls to the left or right when pushed straight, proceed to Fine Tune Tracking section.

#### FINE TUNE TRACKING

For fine tune tracking of stroller the tracking knobs must be used.

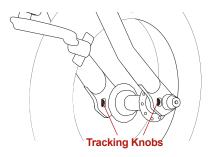


#### If Stroller Pulls RIGHT

#### 1. Open Quick Release Lever

Open quick release lever on front wheel. It is not necessary to remove the front wheel. See Removing Front Wheel section.

#### 2. Adjust RIGHT Tracking Knob

Turn the RIGHT tracking knob clockwise one full turn thereby pushing the right side of the wheel forward and retighten quick release. See Front Wheel Installation section.

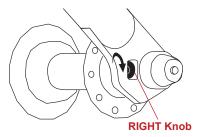

#### 3. Perform Roll Test

Repeat Roll test. If stroller still pulls to the right, repeat steps 1 and 2.

#### If Stroller Pulls LEFT


#### 1. Open Quick Release Lever

Open quick release lever on front wheel. It is not necessary to remove the front wheel. See Removing Front Wheel section.

#### 2. Adjust LEFT Knob

Turn the left knob clockwise one full turn thereby pushing the left side of the wheel forward. Retighten quick release. See Front Wheel Installation.

B·O·B)

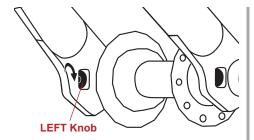


**3. Repeat Roll Test** If stroller still pulls to the left, repeat steps 1 and 2.

#### **SELECT SHOCK SETTING**

- 1. Remove Children From Seats
- 2. Set Shock Setting To Position 2
  Depress shock release knob and simultaneously pull toward back of stroller, sliding knob into position 2.
  Knob will "snap" into place when in correct position.


**REPEAT** on opposite side.

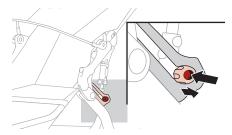

Position 1: SOFTER

CLICK

#### Position 2: HARDER

 

**NOTE:** Every time stroller is folded, stroller shocks default SOFTER position.

#### **SETTING PARKING BRAKE**

The parking brake prevents the stroller from moving while loading and unloading. The parking brake is not designed as a stopping brake.

 
## **A WARNING**

The parking brake is not designed as a stopping brake. The brake should not be used to slow or stop the stroller because doing so could cause the stroller to stop abruptly, resulting in loss of control.

## **A WARNING**

Do not park on inclines. The parking brake is intended to park the stroller on flat surfaces only. Parking on inclines may result in tip over or runaway stroller.


To set the parking brake, press the brake bar down into the locked position with your foot on the red foot pedal – making sure the locking pin fully engages the locking disk.



To ensure the brake is set properly, attempt to roll the stroller fore and aft after setting the brake. If the stroller will not roll, the brake is set properly.

To release the parking brake, lift up on the red foot pedal with your foot until the brake bar springs up into the fully unlocked position.

#### **UNLOCKED POSITION**

 

#### **SECURE CHILD IN SEAT**

## **A WARNING**

This vehicle is intended for up to 2 children from 6 months and up to 17 kg weight per occupant. Do not exceed the maximum weight, as stroller will become unstable.

## **A WARNING**

Avoid serious injury from falling or sliding out. Always use seat harness.

## WARNING

Always use the crotch strap in combination with the waist belt.

## WARNING

Never leave your child in the stroller unattended with or without the parking brake set.


#### 1. Set Parking Brake

Rotate parking brake bar down into locked position.

**NOTE:** Rear wheels should not rotate when parking brake is set.

#### 2. Place Child In Seat

Slip one shoulder strap over each shoulder. Position crotch strap between legs.

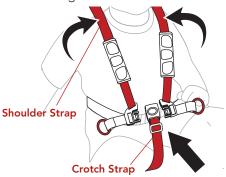

#### 3. Fasten Shoulder Straps


Insert both shoulder strap buckles into crotch strap buckle.

**NOTE:** Crotch strap should be adjusted to have a snug fit.




#### Crotch Strap Buckle

# **4. Adjust Shoulder Strap Height** Adjust height of shoulder strap to fit just above child shoulder height.

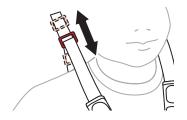

#### 5. Adjust Shoulder Straps

Open Velcro pads. Slide buckle up or down to adjust straps. Seat harness should fit snug and be comfortable.

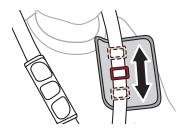

#### 6. Tighten Lap Straps

Adjust lap straps to fit snug and be comfortable.



#### ATTACH WRIST STRAP

The wrist strap is designed to help prevent the stroller from rolling away should you lose your grip on the stroller. When using the stroller, make sure the strap is securely looped over your wrist.

## **A WARNING**

Failure to attach wrist strap can result in damage or injury.

#### Secure Wrist Strap

Slip loop of strap securely onto wrist.



#### **RECLINE SEAT**


## **A WARNING**

Set parking brake before making any seat adjustments.

Hold the backrest securely while you adjust the stroller seat.

#### 1. Recline Seat

Pull up on seat recline buckle to loosen recline straps.

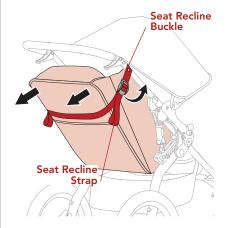

#### 2. Return To Upright Position

To raise seat, lift seat back with one hand and pull recline strap down with other hand.

**REPEAT** on opposite side.



 
## **A WARNING**

When seat/seats is/are fully reclined, backward tip over is more likely to occur and may result in an accident or injury, as seat/seats and/or passenger may contact ground before handlebar.

## **A WARNING**

Always go Jogging/Off-Road with the stroller seat in the fully upright position. Going Jogging/Off-Road with the seat/seats in reclined positions may result in a loss of stability and injury.

#### **TENSION STRAP**



Centre Tension Strap provides support for the centre of the seats and positions the Centre Mount for the canopies. It comes pre-adjusted from the factory; however it can also be tightened if necessary. Tighten this strap to keep the seats from leaning toward each other.

#### **POSITION CANOPY**


#### 1. Extend Canopy

Rotate canopy away from handlebar for additional shade.




#### 2. Retract Canopy

Push canopy toward handlebar.

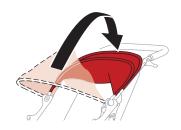

#### **ACCESSORY ADAPTER**

This BOB stroller is equipped with an accessory adapter providing easy attachment for BOB Stroller accessories.

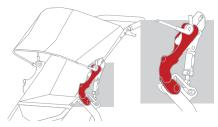

Attaching BOB accessories is simple and easy with this push button, lock and release design. See Stroller Accessories section of this manual for more information on all available accessories.

### **WEATHER SHIELD**

The Weather Shield is available as an accessory and not included in your box.

 
## **A WARNING**

When using the Weather Shield, rear flap must be positioned accordingly to ensure proper air flow to children.

#### 1. Adjust Seat Position


Pull seat recline straps to raise seats back into upright position.

R·O·B




#### 2. Stow Window Cover

Stow window cover in pocket to expose canopy straps.

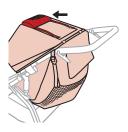

#### 3. Pull Canopy Straps

 Pull canopy straps and secure to Velcro strips on back of canopy.



#### 4. Store Canopy

Position rear canopy stay against handlebar and fold canopy flap up and over canopy, connecting Velcro strips. Inspect opening at back of stroller to make sure space between top of seat back and canopy is unobstructed.



After installing Weather Shield, confirm vents on Weather Shield are aligned with space above seat back and all other vents are free of obstruction.

#### **CARE AND MAINTENANCE**

## WARNING

Check tire pressure before every use.

#### **CLEANING**

The fabric has a stain resistant treatment that makes most cleanups easy. Use a sponge with a solution of mild soap and cold water (maximum temperature of 100 deg. F / 38 deg. C). Rinse thoroughly with clean water to remove soap then air dry. Do not use detergent.

#### **REGULAR INSPECTIONS**

We recommend inspecting your stroller before every use. Verify tire pressure. Verify all screws, attachment points and fasteners are tight. Check all wheels to be sure they are securely clamped. Check for tears or excessive wear in the fabric. We recommend you take your stroller to a designated BOB dealer for periodic inspection and service.

#### **STORAGE**

It is best to store your stroller indoors when it is not in use. This will prolong its attractive appearance. Extended exposure to the sun's ultraviolet rays can fade and damage the fabric, tires, and plastic parts.

#### **CARGO**

The stroller is equipped with four small seat pockets for your children, 2 seat back pockets and a low boy cargo basket under the stroller.

## **A WARNING**

Adding weight to the seat back changes the center of gravity of the stroller, and increases the possibility that it will tip over backwards, resulting in injury. For this reason, loads in the seat back pocket should never exceed 1 kg and maximum weight capacity for low boy cargo basket is 4 kg.

Although the seat backs are padded, it is important to remember that this is what your child leans against.

## **A WARNING**

Do not place sharp objects in the seat back pockets. Leaning against sharp objects in the seat back pockets can result in injury to occupants.

#### **STROLLER ACCESSORIES**

BOB offers a complete line of accessories for your Revolution stroller. Visit our website for full details.

#### WARM FUZZY COSYTOES

Add warmth and comfort to your children's stroll. The warm & fuzzy cosytoes insert is a padded fleece seat liner that inserts into any BOB Stroller seat.

#### **WEATHER SHIELD**

The Weather Shield's water resistant design helps to protect your child from rain and wind while still allowing a view of the world. Please see page 19 for the usage.

#### **SUN SHIELD**

The Sun Shield's specially designed mesh screen reduces the sun's harmful ultraviolet UVA/UVB rays and helps to provide a barrier to wind and flying insects.

#### **SNACK TRAY**

The Snack Tray easily inserts into any BOB Stroller utilizing the BOB Accessory Adapter feature, placing snacks and sippy cups at your child's fingertips. Folds with stroller.

#### LIMITED WARRANTY

For this stroller, we provide a warranty for manufacturing or material defects for 2 years. The warranty period begins on the date of purchase. Please keep the receipt as proof of purchase.

For complaints please return the stroller with the receipt. The warranty is limited to strollers that have been properly handled and are returned in a clean and proper condition.

The warranty does not cover:

- natural wear and tear and damage due to excessive stress.
- · damage caused by unsuitable or

improper use.

#### **WARRANTY OR NOT?**

Fabrics: All our fabrics meet the highest requirements in terms of colour fastness to UV radiation. However, all substances fade if they are exposed to UV radiation. This is not a material defect, but normal wear and tear for which no warranty is given.

**Buckle:** If any problems occur on the buckle, these are often due to dirt that can be washed out.


For warranty service, please contact your dealer immediately. You will be given advice and assistance. When processing claims, product-specific depreciation rates apply. For this we refer you to the general terms and conditions displayed at the dealership.

#### **USE, CARE AND MAINTENANCE:**

The stroller must be treated according to the instructions. We expressly point out that only original accessories or spare parts may be used

#### **SERIAL NUMBER**

Open the stroller. From the back of stroller, look on the inside of the right swing arm.

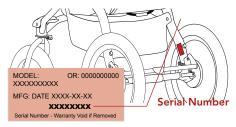

Copyright © 2013.

BRITAX RÖMER Kindersicherheit GmbH

www.britax.eu

