
### **PAGE I**

# 1. PRODUCT OVERVIEW

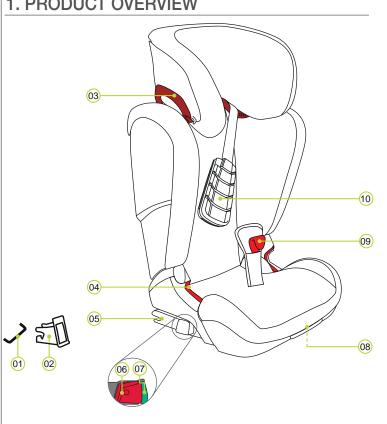

- (65) ISOFIT locking arms
- 6 Release knob 67) Safety button
- (8) ISOFIT adjustment button
- SecureGuard 10 XP-PAD
  - 11) Adjusting handle of the headrest
  - (12) Storage compartment

### 2. INTRODUCTION

Thank you for choosing KIDFIX Z-LINE to keep your child safe through a new stage of their life.

In order to protect your child correctly, the KIDFIX Z-LINE must always be used and installed as described in these instructions.

If you have any further questions regarding its use, please feel free to contact us:

#### **BRITAX RÖMER Child Safety EMEA**

www.britax-roemer.com | hello@britax-roemer.com

#### BRITAX RÖMER Kindersicherheit GmbH Kindersicherheit GmbH

1 Churchill Way West Andover Hampshire SP10 3UW United Kingdom Theodor-Heuss-Straße 9 89340 Leipheim +44 (0) 1264 386034

BRITAX Excelsior Limited BRITAX Nordiska Barn AB Jörgen Kocksgatan 4 SE-211 20 Malmö

+49 (0) 8221 3670 199

These instructions use the following symbols stated below:


Symbol	Keyword	Explanation	
$\triangle$	DANGER!	Risk of severe personal injury	
$\triangle$	WARNING!	Risk of minor personal injury	
$\triangle$	CAUTION!	Risk of material damage	
<b>(i)</b>	TIP:	Useful notes	

Instructions that follow a set sequence are numbered. Example

1. Press the button..

#### Belt guide colours

For better differentiation, the two vehicle seat belts are highlighted in different colours. The diagonal seat belt (16) in dark red and the lap belt 15 in bright red. The colour of the belt guides on the child safety seat follows the same colour

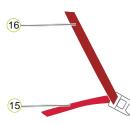

### 3. CERTIFCATION

BRITAX RÖMER	Testing and certification		
Vehicle child safety seat	In accordance with ECE* R 44/04		
Seat	Group	Body weight	
KIDFIX Z-LINE	+	15 to 36 kg	

\*ECE = European Standard for Child Safety Equipment

The child safety seat has been designed, tested and certified according to the requirements of the European Standard for Child Safety Equipment (ECE R 44/04). The seal of approval E (in a circle) and the approval number are located on the orange approval label (sticker on the child safety seat).

▲ DANGER! This approval will be invalidated if you make any modifications to the child safety seat. Only the manufacturer is permitted to make modifications to the child safety seat. The child seat is approved for use both with and without XP-PAD / SecureGuard.

MARNING! Use the KIDFIX Z-LINE exclusively for securing your child in your vehicle. It is in no way suitable as a seat or toy in the home.

▲ DANGER! Never secure your child or the child safety seat with a 2-point belt. If you secure your child in the child seat with only a 2-point belt, then in the event of an accident this may cause serious injuries to your child, possibly resulting in death.



### 4. USE IN THE VEHICLE

(1) ISOFIX fastening points (automobile)

(02) ISOFIX insertion aids

(3) Belt holder (dark red)

(a) Belt guide (bright red)

Please observe the instructions for using children's restraining systems in the operating instructions of your vehicle. The seat can be used in vehicles with ISOFIX anchoring systems (see type list) and in vehicles with a 3-point belt.

Please find the information on the seats approved for child safety seats of the weight classes 15 to 36 kg in the operating instructions of your vehicle.

The KIDFIX Z-LINE is approved for two different methods of installation:


Symbol Installation type		Approval type	Section
click!	with the ISOFIT locking arms on the ISOFIX fastening points in the vehicle. Observe the vehicle type list.		9A
with the vehicle's 3-point seatbelt		universal	9B

a) This means that the child safety seat may only be used in vehicles that are listed in the vehicle type list enclosed. This type list is consistently kept up to date. The latest version can be obtained from us or from www.britax-roemer.com

#### You can use your child safety seat as follows:

In the direction of travel	Yes
Against the direction of travel	No <sup>1)</sup>
with 2-point belt	No
with 3-point belt <sup>2)</sup>	Yes
with ISOFIX fastening points (between seat surface and backrest)	Yes
on front passenger seat	Yes 3)
on outer rear seat	Yes
on centre rear seat (with 3-point belt)	Yes <sup>4)</sup>





#### 1) Use is permitted on a rearward-facing vehicle seat (e.g. in a van or minibus) only if the vehicle seat is also approved for use by adults. The seat may not be in the area of effect of an airbag. 2) The safety belt must be approved to ECE R 16 or a comparable standard (see test label on belt with an "E" or "e" in a circle)

- 3) If there is a front airbag: Slide the vehicle seat a long way back and refer to any instructions in vehicle owner's manual
- 4) Cannot be used if the vehicle seat is equipped with only a 2-point belt.

### **5. CARE AND MAINTENANCE**

Please ensure that you only use the original BRITAX RÖMER replacement seat covers, as the seat cover is an integral part of the child safety seat and fulfils important functions to ensure the smooth operation of the system. Replacement seat covers are available from your dealer.

- The cover can be removed and washed with a mild detergent in the delicates programme of the washing machine (30 °C). Please observe the instructions on the washing label of the cover.
- The plastic parts and the XP-PAD can be cleaned with a soap sud. Do not use any caustic cleaning agents (such as solvents).

↑ DANGER! The child seat must not be used without the seat cover.



#### Removing the seat cover

- Moving the headrest of the vehicle seat into the top
- 2. Unhook the cover hook (18) on the rear of the backrest. Remove the top part of the cover and fold it forwards to


(13) Backrest

(14) Seat cushion

- 4. Unhook the cover hook (18) on the front of the backrest.
- Pull the cover off of the seat surface.


### Removing the headrest cover

6. Unhook the cover loop (19) on the rear of the backrest.



7. Unhook the cover hook (18) on the front of the backrest. 8. Pull off the cover of the headrest 21.

▶ The cover can now be washed. Please observe the instructions on the washing label of the cover:



### Re-fitting the cover

Proceed in reverse order to put on the cover

### 6. DISASSEMBLY AND DISPOSAL

#### **UNFASTENING YOUR CHILD:**

- 1. To unfasten your child, use the release button of your vehicle seat buckle.
- TIP! The XP-PAD can remained applied for easier use on the diagonal belt of your vehicle, the diagonal belt must be retensioned before every journey; see: Section10 step 12 [page II].

#### **REMOVAL:**



1. Operate the release key of your vehicle seat buckle 2. Open the XP-PAD (10) on the Velcro fastener and

remove the diagonal belt 16 Open the dark red belt holder (03) by pressing

backwards the key on the belt holder (03) and unthreading the diagonal belt 16. Only for installation type A (ISOFIT):

## To release the ISOFIT fastening, release the green

- safety button 07 and the red release button 06 first on the one and the on the other side opposite on
- The child safety seat can now be removed.

▲ DANGER! The child safety seat must always be secured when it is in the vehicle, even if no child is being transported.

### **DISPOSAL:**

### Please observe the waste disposal regulations in your country.

Disposal of packaging	Container for cardboard boxes
Seat cover	Residual waste, thermal utilisation
Plastic parts	According to the labelling in the corresponding container
Metal parts	Container for metals
Belt straps	Container for polyester
buckle and tongue	Residual waste

15 kg - 36 kg \* (~4 Y - 12 Y)



# KIDFIX Z-LINE

User instructions

GB



www.britax-roemer.com

# **PAGE II**

### 7. SAFETY NOTES

⚠ Please take the time to read these instructions carefully and keep them to hand in the intended storage compartment (12) on the child safety seat at all times! The instructions must be with the child safety seat if the latter is passed on to a third party.

#### △ DANGER! For the protection of your child:

- In the event of an accident with a collision speed of more than 10 km/h, the child safety seat may be damaged without the damage becoming immediately visible. In this case the child safety seat must be replaced. Please dispose of it properly.
- As a rule, have your child safety seat checked if it was damaged (e.g if it falls on the ground)
- Regularly check all important parts for damage. Ensure that all mechanical parts, in particular, are fully functional.
- Never lubricate or oil parts of the child seat.
- Never leave your child unattended in the child seat in the vehicle.
- Only allow your child to enter and exit the vehicle on the pavement side.
- Protect the child safety seat from intensive direct sunlight when it is not in use. The child safety seat can get very hot in direct sunshine. Child skin is sensitive and could thereby be harmed.
- The more snugly the belt fits over your child's body, the better they will be protected. Therefore avoid putting thick clothes on your child under the belt.
- Take regular breaks on long journeys in order to give your child the opportunity to play around.
- Use on the rear seat: Move the front seat forward far enough that you child's feet cannot hit the backrest of the front seat (to prevent risk of injury).

#### $\triangle$ DANGER! For the protection of all vehicle occupants:

In the case of an emergency stop or an accident, unsecured persons or objects may cause injury to other vehicle occupants. Please always check that...

- the backrests of the vehicle seats are locked (i.e. that any foldable rear seat bench latch is engaged)
- all heavy or sharp-edged objects in the vehicle (e.g. on the parcel shelf) are
- all persons in the vehicle have their seatbelts fastened.
- the child safety seat is always secured when it is in the vehicle, even if no child is being transported.

#### MARNING! For your protection when handling the child seat:

- Never use the child safety seat free-standing, not even for test sitting.
- The backrest (13) may tip backward. Always place the child seat on the vehicle seat before having your child sit down in it.
- When swivelling up the backrest (13), nothing must come between the backrest (13) and the seat cushion (14). You or your child could pinch your fingers, injuring them.
- To avoid damage, ensure that the child safety seat is not jammed in between hard objects (car door, seat rails, etc.).
- Keep the child safety seat in a safe place when it is not in use. Do not place any heavy objects on the seat and do not store it directly next to sources of heat or in direct sunlight.


#### A CAUTION! To protect your vehicle:

• Certain car seat covers made from more sensitive materials (e.g. velour, leather, etc.) may sustain signs of wear and tear when using child safety seats. For optimum protection of your car seat covers, we recommend using the BRITAX RÖMER car seat protector from our range of accessories.

### 8. ADJUSTING THE HEADREST

A correctly set headrest 21) ensures that the diagonal seat belt section (16) is optimally positioned, and gives your child optimum protection.

The headrest 21 must be adjusted so that there is a space two fingers wide between the headrest 21) and your child's shoulders.



#### 1. Reach into the adjustment handle (11) on the back

- of the headrest (21) and pull it towards you. This unlocks the headrest.
- the desired height. As soon as you release the adjustment handle (11), the headrest (21) will lock into place.
- 3. Place the child safety seat on the vehicle seat.
- check the height. Repeat the procedure until the headrest 21) has the correct height.

### 9. INSTALLATION



Adjusting the backrest:

The backrest (13) is connected to the seat cushion (14) by an articulated axis. The backrest (13) of the child seat can be adjusted to any inclination of the vehicle seat. Please know that optimal protection is guaranteed only if the vehicle seat is in an upright position.

### With ISOFIT + 3-point belt

The KIDFIX Z-LINE is installed permanently in the vehicle with the ISOFIT locking

Your child is then buckled into the child seat with the vehicle's 3-point seatbelt.




- 1. If your vehicle is not fitted with ISOFIX insertion aids by standard, clamp the two insertion aids (02), with are included in the scope of delivery of the seat\*, with the section pointing upwards to the two ISOFIX fastening points
- 1 TIP! The ISOFIX fastening points are located between the surface and the backrest of the vehicle seat.

The insertion aids facilitate the installation of the child safety seat with the use of the SOFIX fastening points and prevent damage to the car seat covers. As long as they are not used, remove them and keep them in a safe place. For vehicles with foldable a backrest, the insertion aids need to be removed before folding the backrest. Any problems occurring usually come from soiling or external objects on the insertion aids and on the hook. Remove soiling or external objects to rectify such problems.

- 2. Moving the headrest of the vehicle seat into the top position.
- 3. Carry out the steps in Section 8 "ADJUSTING THE HEADREST".




4. Hold the ISOFIT settings button 08 down and push the ISOFIT locking arms 05 out in full.



5. Push the green safety button 07 and the red release button 06 on both sides of the seat towards each other. This ensures that both hooks on the ISOFIT locking arms 05 are open and ready to use.

6. Place the XP-PAD (10) in the side of the child safety

seat closer to the vehicle door.



7. Guide the elastic holding strap of the XP-PAD 10 into the dark red belt holder 03 of the headrest 21 until it lies completely in the belt holder 03 and is not



- Place the child safety seat in driving direction on a vehicle seat approved for use. Ensure that the backrest (13) is flush with the backrest of the vehicle
- 9. Position the two ISOFIT locking arms 05 directly in front of the two insertion aids 02.







- 12. Shake the child safety seat to ensure that it is securely fastened and check again the fastening buttons 07 to ensure that **both** are fully green.
- 13. Carry out the steps in Section 10 "SECURING YOUR CHILD".

### For the safety of your child, before every journey in the car check that...

- ▶ the child safety seat is slotted in on both sides with the ISOFIT locking arms (05) in the ISOFIT fastening points (01) and both safety buttons (07) are fully
- the child safety seat is securely fastened;
- $\triangleright$  the lap belt (15) runs in the bright red belt guides on both sides of the seat cushion 04
- $\triangleright$  the lap belt (15) runs through the bright red SecureGuard (09).
- ▶ the diagonal seat belt section (16) on the side of the vehicle seatbelt buckle 17) also runs through the light red belt guide 04) of the seat cushion.
- ▶ the diagonal seat belt section (16) runs through the dark red belt holder (03) of the headrest
- ▶ the XP-PAD (10) is installed and used correctly,
- the diagonal seat belt section (16) runs diagonally backward.
- be the straps are tight and not twisted,
- ▶ the seatbelt buckle 17 must not be positioned on the red belt guide 04 in the seat cushion.
- ⚠ DANGER! If your child try to use to open the vehicle belt buckle (17) or introduce the diagonal belt section (16) into the bright red Secure Guard (09), stop as soon as possible. Check whether the child safety seat is correctly fastened and ensure that your child is correctly secured. Explain to your child the dangers associated with his actions.

#### UNFASTENING YOUR CHILD AND REMOVAL:


To unfasten your child or to remove the child safety seat, observe the steps in Section 6 "REMOVAL AND DISPOSAL" [PAGE I]

### With 3-point belt

The KIDFIX Z-LINE is not installed permanently in the vehicle. It is simply secured together with your child using the vehicle's 3-point seatbelt.



- 1. Carry out the steps in Section 8 "ADJUSTING THE HEADREST". 2. Place the XP-PAD (10) on the side of the child safety
- seat closer to the vehicle door.
- Guide the elastic holding strap of the XP-PAD (10) into the dark red belt holder 03 of the headrest 21 until it lies completely in the belt holder 03 and is not twisted.
- Place the child seat on the vehicle seat. Ensure that the backrest (13) is flush with the backrest of the vehicle seat.



5. Carry out the steps in Section 10 "SECURING YOUR CHILD".

### for the safety of your child, before every journey in the car check that...

- ▶ the child safety seat is securely fastened;
- ▶ the lap belt 15 runs in the bright red belt guides on both sides of the seat cushion 04.
- the lap belt 15 runs through the bright red SecureGuard 09.
- the diagonal seat belt section (16) on the side of the vehicle seatbelt buckle 17) also runs through the light red belt guide 04 of the seat cushion,
- the diagonal seat belt section (16) runs through the dark red belt holder (03) of the headrest.
- ▶ the diagonal seat belt section (16) runs diagonally backward,
- be the straps are tight and not twisted,
- ▶ the XP-PAD (10) is installed and used correctly,
- the seatbelt buckle(17) must not be positioned on the red belt guide (04) in the seat cushion.
- ⚠ DANGER! If your child try to use to open the vehicle belt buckle (17) or introduce the diagonal belt section (16) into the bright red SecureGuard (09), stop as soon as possible. Check whether the child safety seat is correctly fastened and ensure that your child is correctly secured. Explain to your child the dangers associated with his actions.

To unfasten your child or to remove the child safety seat, observe the steps in Section 6 "REMOVAL AND DISPOSAL" [PAGE I]

### 10. SECURING YOUR CHILD



- 1. Let your child sit in the child safety seat and place the XP-PAD (10) over the chest area of your child. If you find that the retraction force of the 3-point seat belt is not enough to ensure that the seat belt is tight (against the child), the child seat can be used without XP-PAD (10); see Chapter 3 "APPROVAL"
- 2. Pull out the vehicle belt and guide it in front of your child to the vehicle seat buckle 17
- ⚠ DANGER! Ensure the vehicle belt is not twisted, as otherwise the full protective effect of the retaining system is not ensured.




click


- 3. Engage the buckle tongue in the vehicle seat buckle (17) with a CLICK!
- 4. Place the diagonal seat belt section 16 and lap belt section (15) on the side of the vehicle seatbelt buckle 17 into the light red belt guide 04 of the seat cushion.
- ♠ DANGER! The vehicle seatbelt buckle must not be positioned between the light red beltguide and the armrest. (17) (04)
- **5.** Also place the lap belt section (15) on the other side of the seat cushion in the light red belt guide 04.
- ⚠ DANGER! The lap belt section (15) must lie as low as possible over your child's hips on both sides.



- 6. Guide the lap belt section (15) into the bright red SecureGuard 09.
- ⚠ DANGER! Do not guide the diagonal the section (16) into the bright red SecureGuard 09. 7. Guide the diagonal seat belt section 16 into the
- dark red belt holder (02) of the headrest (21) until it lies completely in the belt holder (02) and is not twisted 1 Tip! If the backrest 13 conceals the belt holder 02,
- you can adjust the headrest 21 upwards. The diagonal seat belt section (16) can now be easily inserted. Now return the headrest (21) to the proper height.



- Ensure that the diagonal belt (16) runs over the collarbone of your child and is not on the neck and that the key on the belt holder is 02 fully closed.
- (i) Tip! You can still adjust the height of the headrest (21) again here in the vehicle.




- Open the Velcro fastener on the XP-PAD (10) and fold the top part of the XP-PAD (10) to the side. 10. Insert the diagonal belt (16) in the die nubby surface
- of the XP-PAD (10). 11. Close the XP-PAD 10 again by folding the folded part back and closing the Velcro fastener.





- ⚠ DANGER! The diagonal seat belt section (16) must run diagonally backward. You can adjust the course of the belt with your vehicle's adjustable belt deflector.
- ⚠ DANGER! The diagonal belt (16) must never be directed forwards to the belt deflector on the vehicle. In this case, use the child safety seat on the back seat only.




- 12. Tighten the vehicle seat belt by pulling on the diagonal seat belt section (16)
- 13. Observe the further steps of the relevant installation type.







2. You can now move the unlocked headrest 21 to





11. Hold the ISOFIT settings button 08 down and push the child safety seat as far back as possible.

#### UNFASTENING YOUR CHILD AND REMOVAL: