


1. PRODUCT OVERVIEW

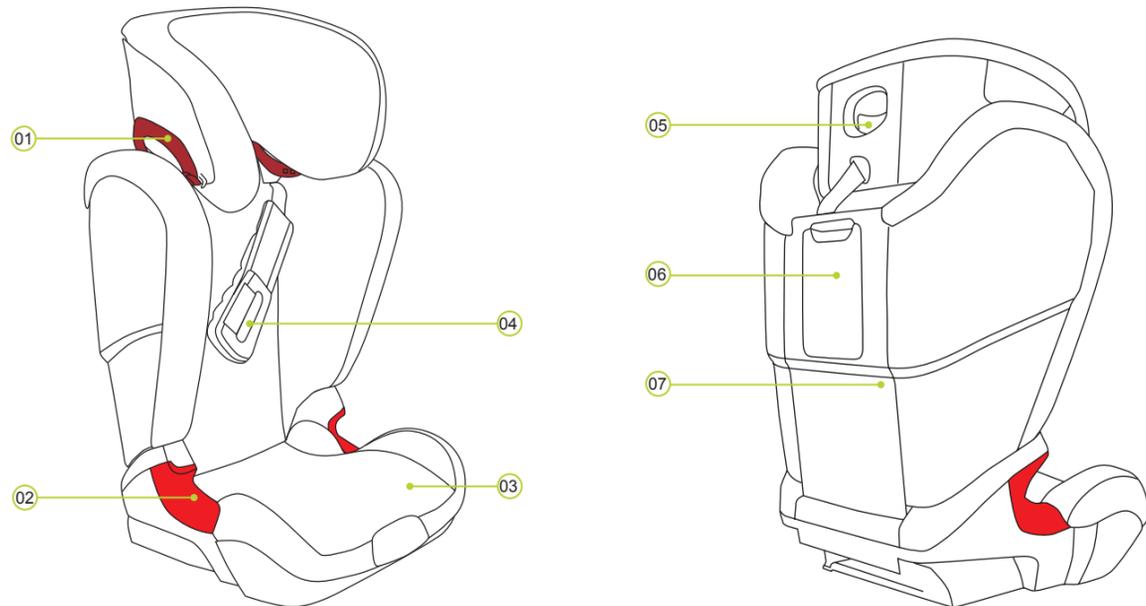

- 01 Belt holder (dark red)
- 02 Belt guide (bright red)
- 03 Seat cushion
- 04 XP-PAD
- 05 Adjusting handle of the headrest
- 06 Storage compartment
- 07 Backrest

2. INTRODUCTION

We are delighted that our KID XP can safely accompany your child through a new stage in its life.

In order to protect your child correctly, the KID XP must always be used and installed as described in these instructions.

If you have any further questions regarding its use, please feel free to contact us:

BRITAX RÖMER
 Kindersicherheit GmbH
 Blaubeurer Straße 71
 D-89077 Ulm
 Germany
 T: +49 (0) 731 9345-199
 F: +49 (0) 731 9345-210
 E: info@de.britaxeurope.com
 www.roemer.eu

BRITAX EXCELSIOR LIMITED
 1 Churchill Way West
 Andover
 Hampshire SP10 3UW
 United Kingdom
 T: +44 (0) 1264 333343
 F: +44 (0) 1264 334146
 E: helpline@uk.britaxeurope.com
 www.britax.eu

These instructions use the following symbols stated below:

Symbol	Keyword	Explanation
	DANGER!	Risk of severe personal injury
	WARNING!	Risk of minor personal injury
	CAUTION!	Risk of material damage
	TIP!	Useful notes


Instructions that follow a set sequence are numbered.

Example:

1. Press the button...

Belt guide colours

For better differentiation, the two vehicle seat belts are highlighted in different colours. The diagonal seat belt (16) in dark red and the lap belt (15) in bright red. The colour of the belt guides on the child safety seat follows the same colour scheme.

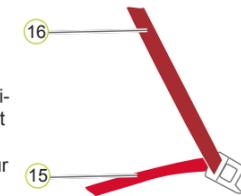

3. Certification

BRITAX RÖMER Child safety seat	Testing and certification In accordance with ECE* R 44/04	
	Group	Body weight
KID XP	II+III	15 to 36 kg


*ECE = European Standard for Child Safety Equipment

The child safety seat has been designed, tested and certified according to the requirements of the European Standard for Child Safety Equipment (ECE R 44/03). The seal of approval E (in a circle) and the approval number are located on the orange approval label (sticker on the child safety seat).

⚠ DANGER! This approval will be invalidated if you make any modifications to the child safety seat. Only the manufacturer is permitted to make modifications to the child safety seat.

⚠ WARNING! Use the KID XP exclusively for securing your child in your vehicle. It is in no way suitable as a seat or toy in the home.

⚠ DANGER! Never secure your child or the child safety seat with a 2-point belt. If you secure your child in the child seat with only a 2-point belt, then in the event of an accident this may cause serious injuries to your child, possibly resulting in death.

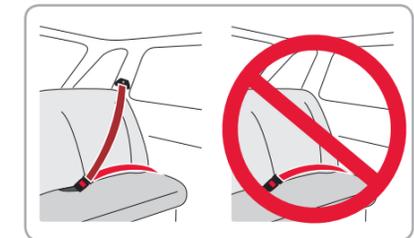

4. USE IN THE VEHICLE

Please observe the instructions for using children's restraining systems in the operating instructions of your vehicle. The seat can be used in vehicles with a 3-point belt.


Please find the information on the seats approved for child safety seats of the weight classes 15 to 36 kg in the operating instructions of your vehicle.

The KID XP is approved for one method of installation:

Symbol	Installation type	Approval type
	with the vehicle's 3-point seatbelt	universal

You can use your child safety seat as follows:

In the direction of travel	yes
against the direction of travel	no ¹⁾
with 2-point belt	no
with 3-point belt ²⁾	yes
on front passenger seat	yes ³⁾
on outer rear seat	yes
on centre rear seat (with 3-point belt)	yes ⁴⁾

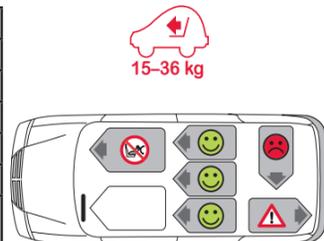


- Use is permitted on a rearward-facing vehicle seat (e.g. in a van or minibus) only if the vehicle seat is also approved for use by adults. The seat may not be in the area of effect of an airbag.
- The safety belt must be approved to ECE R 16 or a comparable standard (see test label on belt with an "E" or "e" in a circle).
- If there is a front airbag: Slide the vehicle seat a long way back and refer to any instructions in vehicle owner's manual.
- Cannot be used if the vehicle seat is equipped with only a 2-point belt.

5. CARE AND MAINTENANCE

Please ensure that you only use the original BRITAX RÖMER replacement seat covers, as the seat cover is an integral part of the child safety seat and fulfils important functions to ensure the smooth operation of the system. Replacement seat covers are available from your dealer or from an ADAC office.

- The cover can be removed and washed with a mild detergent in the delicates programme of the washing machine (30 °C). Please observe the instructions on the washing label of the cover.
- The plastic parts and the XP-PAD can be cleaned with a soap sud. Do not use any caustic cleaning agents (such as solvents).

⚠ DANGER! The child seat must not be used without the seat cover.

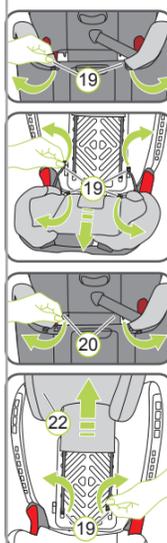

Removing the seat cover

- Moving the headrest of the vehicle seat into the top position.
- Unhook the cover hook (19) on the rear of the backrest.
- Remove the top part of the cover and fold it forwards to the seat surface.
- Unhook the cover hook (19) on the front of the backrest.
- Pull the cover off of the seat surface.

Removing the headrest cover

- Unhook the cover loop (20) on the rear of the backrest.

- Unhook the cover hook (19) on the front of the backrest.
 - Pull off the cover of the headrest (22).
- The cover can now be washed. Please observe the instructions on the washing label of the cover:



Re-fitting the cover

Proceed in reverse order to put on the cover.


6. DISASSEMBLY AND DISPOSAL

UNFASTENING YOUR CHILD:

1. To unfasten your child, use the release button of your vehicle seat buckle.

ⓘ TIP! The XP-PAD can remain applied for easier use on the diagonal belt of your vehicle, the diagonal belt must be retensioned before every journey; see: Section 10 step 12 [page II].

REMOVAL:

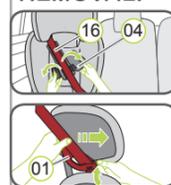

- Operate the release key of your vehicle seat buckle
 - Open the XP-PAD (04) on the Velcro fastener and remove the diagonal belt (16).
 - Open the dark red belt holder (01) by pressing backwards the key on the belt holder (01) and unthreading the diagonal belt (16).
- The child safety seat can now be removed.

⚠ DANGER! the child safety seat must always be secured when it is in the vehicle, even if no child is being transported.

DISPOSAL:

Please observe the waste disposal regulations in your country.

Disposal of packaging	Container for cardboard boxes
Seat cover	Residual waste, thermal utilisation
Plastic parts	According to the labelling in the corresponding container
Metal parts	Container for metals
Belt straps	Container for polyester
Buckle and tongue	Residual waste

15 to 36 kg


(~4 to 12 years of age)

britax

KID XP

User instructions

GB

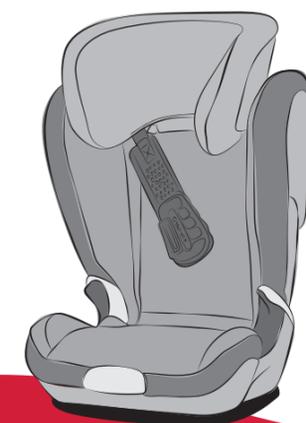

www.britax.eu

2000010044 14/09

7. SAFETY NOTES

⚠ Please take the time to read these instructions carefully and keep them to hand in the intended storage compartment 06 on the child safety seat at all times! The instructions must be with the child safety seat if the latter is passed on to a third party.

⚠ DANGER! For the protection of your child:

- In the event of an accident with a collision speed of more than 10 km/h, the child safety seat may be damaged without the damage becoming immediately visible. In this case the child safety seat must be replaced. Please dispose of it properly.
- Have your child safety seat checked as a rule if it was damaged (e.g. if it falls to the ground).
- Regularly check all important parts for damage. Ensure that all mechanical parts, in particular, are fully functional.
- Never lubricate or oil parts of the child seat.
- Never leave your child unattended in the child seat in the vehicle.
- Let your child in and out of the vehicle from the pavement side as a rule.
- Protect the child safety seat against intensive direct sun radiation, as long as it is not in use. The child safety seat can become very hot under direct sun radiation. Child skin is sensitive and could thereby be injured.
- The more snugly the harness fits over your child's body, the better your child will be protected. Therefore avoid putting thick clothes on your child under the belt.
- Take regular breaks on long journeys in order to give your child the opportunity to play around.
- Use on the rear seat: Push the front seat forwards sufficiently so that the feet of your child do not hit the backrest of the front seat (to avoid the risk of injury).

⚠ DANGER! For the protection of all vehicle occupants:

- In the case of an emergency stop or an accident, unsecured persons or objects may cause injury to other vehicle occupants. Please always check that...
- the backrests of the vehicle seats are locked (i.e. that a foldable rear seat bench latch is engaged).
 - all heavy or sharp-edged objects in the vehicle (e.g. on the parcel shelf) are secured.
 - all persons in the vehicle have their seatbelts fastened.
 - the child safety seat is always secured when it is in the vehicle, even if no child is being transported.

⚠ WARNING! For your protection when handling the child seat:


- Never use the child safety seat free-standing, not even for test sitting.
- When swivelling up the backrest 07, nothing must come between the backrest 07 and the seat cushion 03. You or your child could pinch your fingers, injuring them.
- To avoid damage, ensure that the child safety seat is not jammed in between hard objects (car door, seat rails, etc.).
- Keep the child safety seat in a safe place if it is not in use. Do not place any heavy objects on the seat and do not store it directly next to sources of heat or in direct sunlight.

⚠ CAUTION! To protect your vehicle:

- Certain car seat covers made from more sensitive materials (e.g. velour, leather, etc.) may sustain signs of wear and tear when using child safety seats. For the optimum protection of your car seat covers, we recommend using the BRITAX RÖMER child safety seat surface from our accessories programme.

8. ADJUSTING THE HEADREST

A correctly set headrest 22 ensures that the diagonal seat belt section 16 is optimally positioned, and gives your child optimum protection. The headrest 22 must be adjusted so that there is a space two fingers wide between the headrest 22 and your child's shoulders.

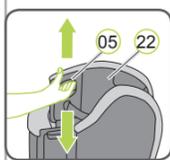

To adjust the height of the headrest to fit your child:

1. Reach into the adjustment handle 05 on the back of the headrest 22 and pull it towards you. This unlocks the headrest.
2. You can now move the unlocked headrest 22 to the desired height. As soon as you release the adjustment handle 05, the headrest 22 will lock into place.
3. Place the child safety seat on the vehicle seat.
4. Have your child sit down in the child safety seat and check the height. Repeat the procedure until the headrest 22 has the correct height.

9. INSTALLATION

With 3-point belt

The KID XP is not installed permanently in the vehicle. It is simply secured together with your child using the vehicle's 3-point seatbelt.



1. Carry out the steps in Section 8 „ADJUSTING THE HEADREST“.
2. Place the XP-PAD 04 on the side of the child safety seat closer to the vehicle door.
3. Guide the elastic holding strap of the XP-PAD 04 into the dark red belt holder 01 of the headrest until it lies completely in the belt holder 01 and is not twisted.
4. Place the child seat on the vehicle seat. Ensure that the backrest 07 is flush with the backrest of the vehicle seat.
5. Carry out the steps in Section 10 „SECURING YOUR CHILD“.

ⓘ TIP! If the headrest of the vehicle seat gets in the way, turn it the other way.

ⓘ TIP! If the headrest of the vehicle seat gets in the way, turn it the other way.

10. SECURING YOUR CHILD





1. Let your child sit in the child safety seat and place the XP-PAD 04 over the chest area of your child.
2. Pull out the vehicle belt and guide it in front of your child to the vehicle seat buckle 18.
3. Engage the buckle tongue in the vehicle seat buckle 18 with a CLICK!
4. Place the diagonal seat belt section 16 and lap belt section 15 on the side of the vehicle seatbelt buckle 18 into the light red belt guide 02 of the seat cushion.
5. Also place the lap belt section 15 on the other side of the seat cushion in the light red belt guide 02.

⚠ DANGER! Ensure the vehicle belt is not twisted, as otherwise the full protective effect of the retaining system is not ensured.

⚠ DANGER! The vehicle seatbelt buckle 18 must not be positioned between the light red belt guide 02 and the armrest.

⚠ DANGER! The lap belt section 15 must lie as low as possible over your child's hips on both sides.

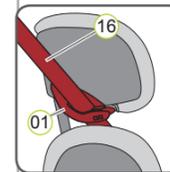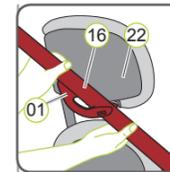

6. Guide the diagonal seat belt section 16 into the dark red belt holder 01 of the headrest 22 until it lies completely in the belt holder 01 and is not twisted.
- ⓘ TIP!** If the backrest 07 conceals the belt holder 01, you can adjust the headrest 22 upwards. The diagonal seat belt section 16 can now be easily inserted. Now return the headrest 22 to the proper height.

7. Ensure that the diagonal belt 16 runs over the collarbone of your child and is not on the neck and that the key on the belt holder is 01 fully closed.
- ⓘ TIP!** You can still adjust the height of the headrest 22 again here in the vehicle.

8. Open the Velcro fastener on the XP-PAD 04 and fold the top part of the XP-PAD 04 to the side.
9. Insert the diagonal belt 16 in the die nubby surface of the XP-PAD 04.
10. Close the XP-PAD 04 again by folding the folded part back and closing the Velcro fastener.

⚠ DANGER! The diagonal seat belt section 16 must run diagonally backward. You can adjust the course of the belt with your vehicle's adjustable belt deflector.

⚠ DANGER! The diagonal belt 16 must never be directed forwards to the belt deflector on the vehicle. In this case, use the child safety seat on the back seat only.

11. Tighten the vehicle seat belt by pulling on the diagonal seat belt section 16.

⚠ For the safety of your child, before every journey in the car check that...

- ▶ the child safety seat is securely fastened;
- ▶ the lap belt 15 runs in the bright red belt guides on both sides of the seat cushion 02.
- ▶ the diagonal seat belt section 16 on the side of the vehicle seatbelt buckle 18 also runs through the light red belt guide 02 of the seat cushion,
- ▶ the diagonal seat belt section 16 runs through the dark red belt holder 01 of the headrest,
- ▶ the diagonal seat belt section 16 runs diagonally backward,
- ▶ the straps are tight and **not** twisted,
- ▶ the XP-PAD 04 is installed and used correctly,
- ▶ the seatbelt buckle 18 must not be positioned on the red belt guide 02 in the seat cushion.

⚠ DANGER! If your child tries to open the vehicle belt buckle 18, stop immediately as soon as possible. Check whether the child safety seat is correctly fastened and ensure that your child is correctly secured. Explain to your child the dangers associated with his actions.

UNFASTENING YOUR CHILD AND REMOVAL:

To unfasten your child or to remove the child safety seat, observe the steps in Section 6 „REMOVAL“ [PAGE I]

If you have any further questions regarding its use, please feel free to contact us:

BRITAX RÖMER
Kindersicherheit GmbH
Blaubeurer Straße 71
D-89077 Ulm
Germany

T: +49 (0) 731 9345-199
F: +49 (0) 731 9345-210
E: info@de.britaxeuropa.com
www.roemer.eu

BRITAX EXCELSIOR
LIMITED
1 Churchill Way West
Andover
Hampshire SP10 3UW
United Kingdom

T: +44 (0) 1264 333343
F: +44 (0) 1264 334146
E: service.uk@britax.com
www.britax.eu